


**John
Chatillon
& Sons
Inc.**

83-30 Kew Gardens Road
Kew Gardens, New York 11415
(718) 847-5000 - Fax (718) 441-4365

SET UP INSTRUCTIONS
FOR BP-13 & BP-15
BENCH PLATFORM SCALE



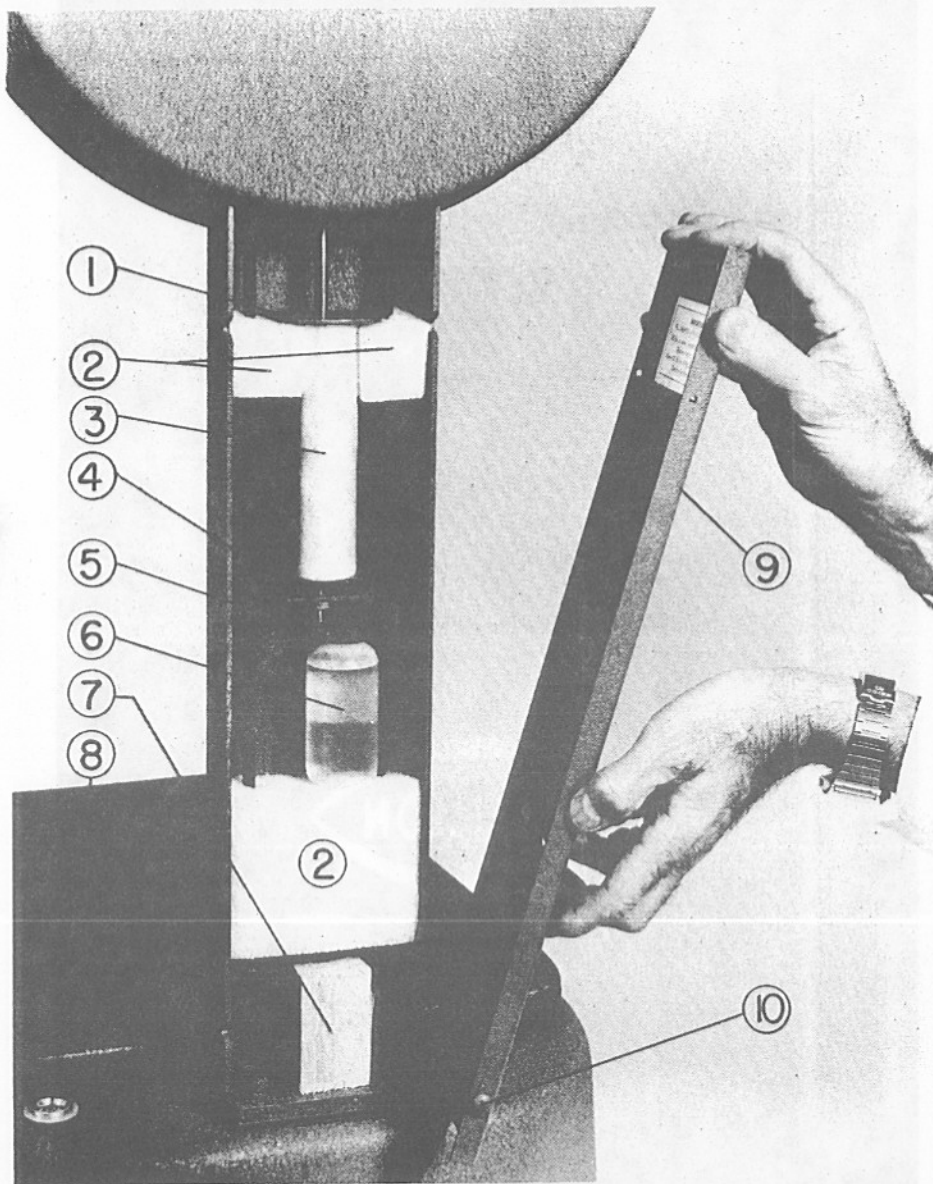

- A. Remove poly-base wrap and both foam platform protectors.
- B. Place scale on firm level surface making sure nothing interferes with the free movement of the platform or internal lever system.
- C. Remove four Phillips head screws (#10) and slide out rear column cover (#9).
- D. Remove three foam protectors (#2), wooden block (#7) and bottle of oil (#6) from column.
- E. Turn leveling screws at bottom of the base until the spirit level bubble (#8) is centered.
- F. Loosen locking nut (#4) and turn knurled bolt (#5) until it is flush with the top surface of the support bracket.
- G. Carefully slide out dashpot cylinder (#3).
- H. Pour the entire contents of the plastic bottle into the cylinder.
 (This high quality damping oil is temperature compensated to assure constant viscosity and buoyancy. Use of different grade oil or no oil at all may result in a slight error of weight indication due to a different buoyancy factor).
- I. Re-insert the cylinder slowly in order to avoid oil splashing.
- J. Press cylinder against upper plate (#1) and tighten knurled bot (#5) against the round depression in the bottom of the cylinder. Tighten locking nut (#4) to prevent loosening of bolt.
- K. Reattach rear column cover.
- L. Apply full capacity force or weight to the scale platform, remove it and press platform several times with hands.
- M. Remove red plastic plug on top of scale head and adjust scale pointer to read zero by turning screw on top with a screwdriver.